

Instructions:

- 1 Identify correct bushing (Figure 2)
For 6mm Rod (Gray Bushing)
For 8mm Rod (Black Bushing)
- 2 Place bushing around rod and insert into the housing (Figure 3)
- 3 Close housing and start screws, but do not fully tighten (Figure 4)
- 4 Compress the installed prop by opening and closing. This will set the proper position of the switch housing.
- 5 Tighten screws. (Note: Do not over tighten)
Your switch is now securely installed.

Installation

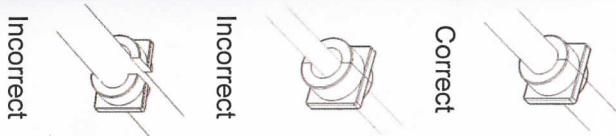


FIGURE 2

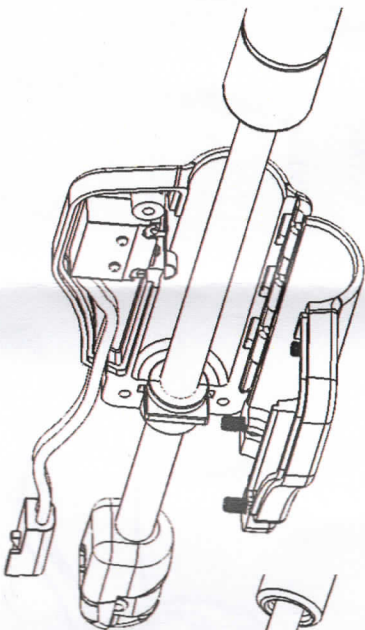


FIGURE 3

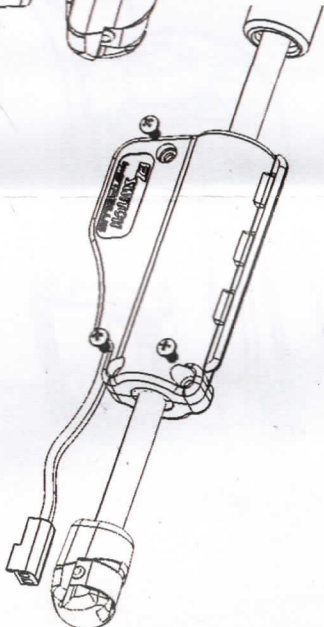


FIGURE 4

EZ SWITCH



BY

STABILUS

060853

Package Includes

Comp.	Qty
Housing	2 (pcs)
Switch Unit	1
Bushing	2
-6mm Gray	
-8mm Black	
Screws	4

Tools Needed

Screw Driver (Phillips Head)

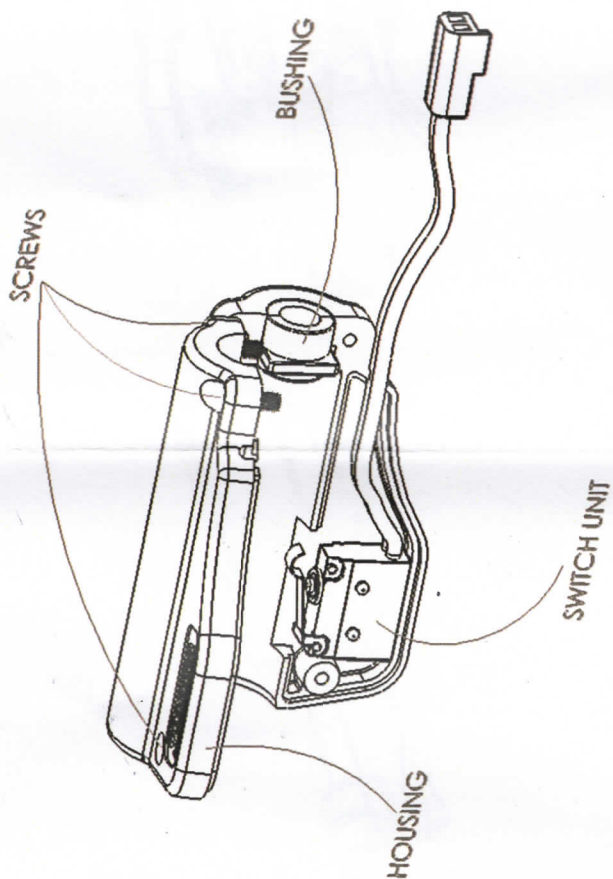


FIGURE 1